

## INDUCTOR BOWL INSTRUCTIONS

WATER SUPPLY PUMP SWITCH

- Flow desired amount of Holganix into Cone Tank from the RAD unit (See RAD instructions).
- 2. Add extras to Cone tank(Pre-M, Insecticide, etc).
- 3. Hook Banjo quick connect to truck tank.
- 4. Turn on Water Supply Pump Switch.
- 5. Turn on Cone Discharge Valve (#2).
- 6. If Rinse Valve (#1) is closed, turn on to clean Cone Tank.
- 7. When Cone Tank is clear, shut off switch #1 and #2.

\*\*\* If applicable: After cone tank is emptied, use Bypass Switch #3 to flow a higher volume, for a faster fill. Be sure to shut off valve before turning off Water Supply Switch. NOTE: Valve #1 & #2 should never be open at the same time.

When truck tank is full, turn off Water Supply Pump Switch, and close valve on the TRUCK END of hose.



RINSE VALVE (#1)

CONE DISCHARGE VALVE (#2)

BYPASS VALVE (#3)



Valve ON is when lever is parrallel to fluid line.

Valve OFF is when lever is perpendicular to fluid line.